User manual

Bluetooth

BTP2143R/BTP2144G

Please read the user manual carefully before operating the unit

Bluetooth | E-Book | Audio input | Alarm | Calendar | FM Scan Radio | USB /MP3 | TF Card | LI Battery

IMPORTANT

Thank you for using our company's products. In order to use this player correctly and conveniently, you are advised to read this user manual carefully first.
This user manual will help you understand functions and enjoy your new product.

WARNINGS

★Never use DC power over 5V as to avoid the damage of this player
★Don't listen to this player with the biggest volume for long time as to avoid the damage of your ear.
★Avoid the disturb from any strong magnetic field or electric wave.

Avoid the following conditions:

★Too high and too low temperature.
★Direct sunshine
★Humid, water drop, oil, chemical liquid, insecticide
★Suddently moved from cold to warm area, should wait the player becomes as warm as the room temperature as to avoid malfunction.
★Never to put any liquid container like flower vase on top of the player.

ACCESSORIES

USER MANUAL	1PCS
WARRANTY CARD	1PCS
POWER ADAPTOR	1PCS
AUDIO LINE-IN CABLE	1PCS
LI-BATTERY	1PCS

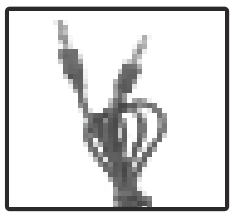

AUDIO LINE-IN LINE

THE SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

EXCLUSIVE IMPORTER IN GREECE:
Amiridis – Savvidis S.A.

- 33, Vas. Olgas avenue
  P.C. 54641, Thessaloniki, Greece
  Tel: +30 2310 850107, +30 2310 850108, Fax: +30 2310 867835
- 45, Posidonos street
  P.C. 18344, Moschato, Athens, Greece
  Tel: +30 210 9402064, Fax: +30 210 9402137
- www.amiridis-savvidis.gr

NAMES OF PARTS

1, Time/EQ button
2, Volume-/previous button
3, Play/pause/handfree button
4, Volume+/next button
5, Mode button
6, Built-in speaker
7, LCD display panel
8, Speaker grid
9, Power switch
10, Recharging indication lamp
11, AC jack
12, Audio input jack
13, USB port
14, TF card slot
15, Battery door(bottom)
16, Bluetooth indication lamp

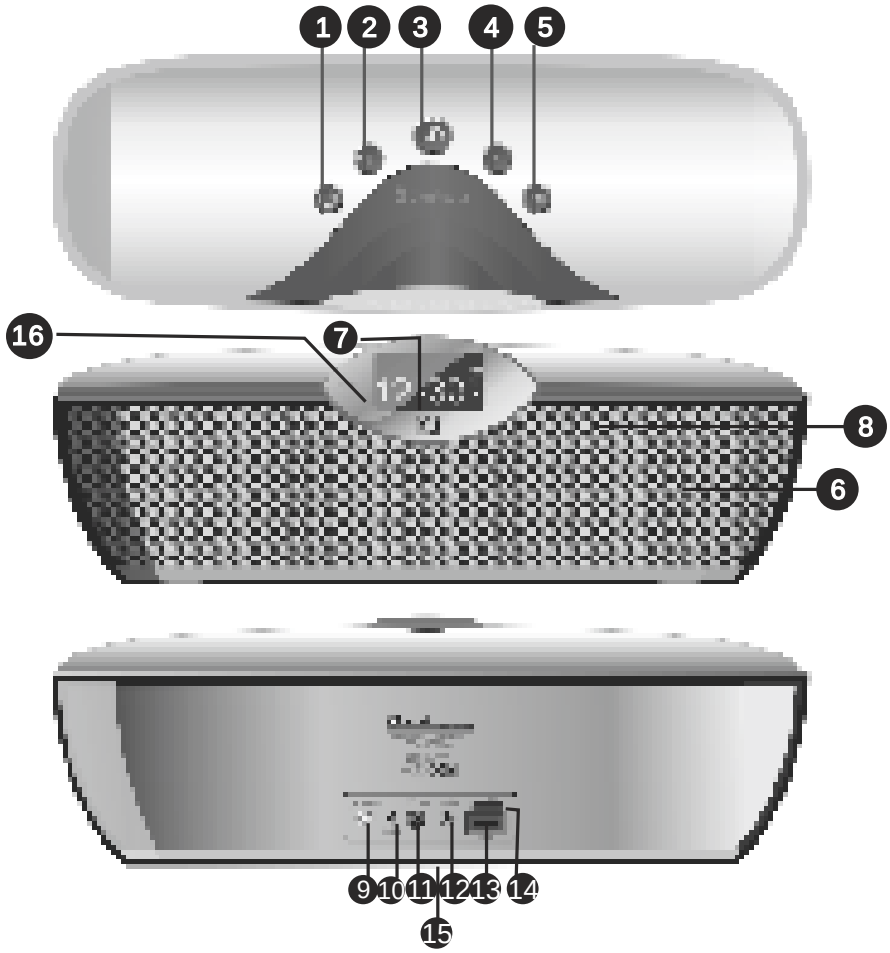

NOTICE ABOUT RECYCLING

Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

Declaration of Conformity

This product complies with the requirements of the following directives:
Electromagnetic Compatibility (EMC) Directive: 2004/108/EC
Low Voltage Directive (LVD): 2006/96/EC
Eco Design requirements for standby and off mode power consumption directive: 2005/32/EC
CE Marking Directive: 93/68/EEC

UNIQUE FUNCTIONS

USB/TF CARD MUSIC PLAYER,MP3/WMA DOUBLE DECODING
Built-in USB/TF intelligent decoder, can play MP3/WAV format.
FM RADIO
Built-in FM radio module, with auto station searching and presetting
LCD DISPLAY, LYRICS SYNCHRONIZATION DISPLAY
Can display English song track, lyrics synchronization display and repeat
CALENDAR&ALARM CLOCK
Can display the year, month, date and time, with selection of Gregorian calendar, lunar calendar and week. Easy to set the personal music, the time of the alarm clock and adjust volume.
DOUBLE POWER SUPPLY MODE
Support external power adaptor & Li-battery, resume music once power on
E-BOOK FUNCTION
Can display the .txt book inside the storage card or USB
SOUND REMINDING FUNCTION
With the sound instruction once press the button for the function operation

SPECIFICATIONS

POWER: DC 9V
OUTPUT IMPEDANCE: SPEAKER 4 OHMS+4OHMS
OUT PUT POWER: 5W+5W(IMPEDANCE 4 OHMS)
FREQUENCY: FM1:76-90MHz FM2:87.5-108MHz
E-BOOK FORMAT:TXT
USB/TF CARD PLAY FORMAT: MP3,WMA
USB READING BIT RATE: 32kbps-320kbps
BLUETOOTH :8M
BATTERY: d.c-7.4V(7.4V 2000Ma li-lion battery one piece)
CHARGING TIME: 3-5 HOURS(Can support about1.5 hours playback when full)
DIMENSION: 300(L)x104(W)x100(H)mm
WEIGHT: ABOUT1 KG

POWER SUPPLY

Recharging:Once can't power on or there is the empty grid of the power display on the panel,please use the power adaptor of the accessorary to recharge the battery in time.
Battery:If need to keep the time setting of the system and the alarm clock,please insert 1 pcs AAA(UM4) battery into the battery house,and change this battery termly

OPERATION OF ALL FUNCTIONS

SYSTEM FOLDER(MENU)

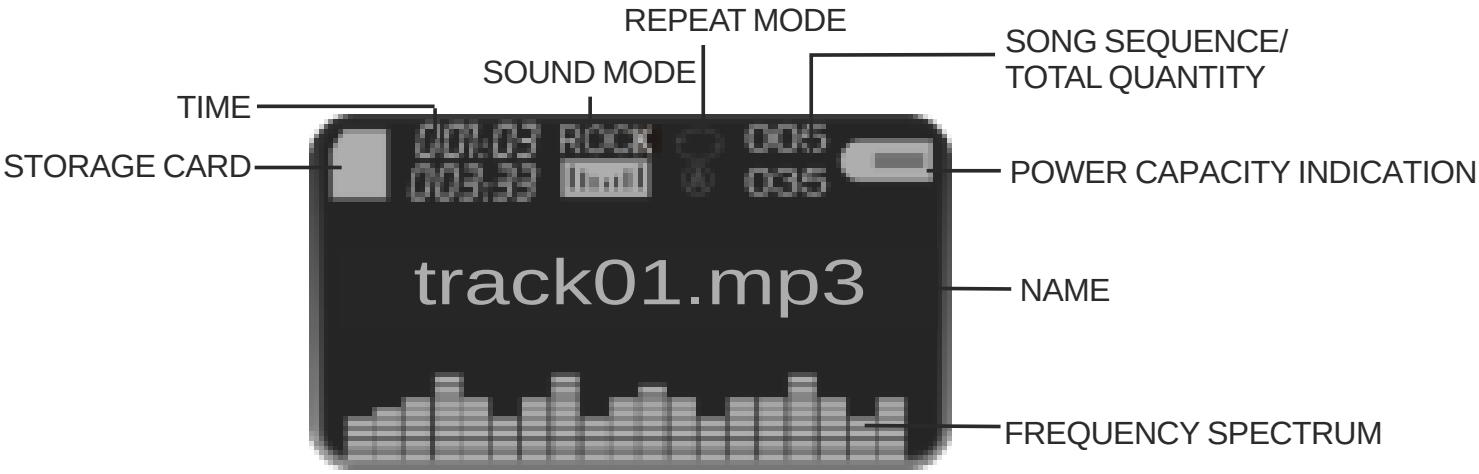

MUSIC

- KEEP PRESSING M BUTTON WHEN PLAYING
  - REPEATING MODE
  - FILE BROWSE
  - GO INTO THE MAIN INTERFACE
  - EXIT
- KEEP PRESSING THE MODE BUTTOON WHEN PAUSING
  - FILE BROWSE
  - DELETE THE FILE
  - DELETE ALL
  - EXIT

AUDIO INPUT

- AUX IN

FM RADIO

- KEEP PRESSING M BUTTON WHEN RADIO ON
  - MANUAL OPERATION
  - SAVE THE STATION
  - DELETE THE STATION
  - DELETE ALL
  - NORMAL FREQUENCY
  - SCHOOL FREQUENCY
  - GO INTO THE MAIN INTERFACE
  - EXIT

BLUETOOTH

- BLUETOOTH

E-BOOK

- KEEP PRESSING THE MODE BUTTON WHEN E-BOOK ON
  - FILE SELECTION
  - PLAY SETTING
  - PLAY SPEED
  - GO INTO THE MAIN INTERFACE
  - EXIT

SYSTEM SETTING

- BACKLIGHT TIME
- LANGUAGE SELECTION
- TOOL
- ADJUSTING OF THE CONTRAST RATE
- FIRMWARE VERSION
- DAFAULT SETTING
- EXIT

CALENDAR

- CALENDAR

Calendar Check:Can get the information about the Chinese calendar, the Gregorian calendar and the week

Press the mode button and turn into the status of calendar checking,then press the time button to select the year,the month,the date,and press the button (2) or the button(4) to adjust the calendar or check the calendar,it will turn back automatically after 20 seconds and displays the current time.

System Setting:

Press the mode button and turn into the status of the system setting

Backlight Time:

Press the button 2 or the button 4 to select the backlight time setting,,press the button 3 to confirm,then press the button 2 or the button 4 to set this time,from 0-240 seconds, the backlight will be always on if setting “00”,the duration time of the backlight is 9 seconds if setting “9”,at last press the button 3 to confirm and exit the setting

Button Sound:

Can set this function on or off,the default setting is on

Language Selection:

Press the button 2 or the button 4 to select the LANGUAGE SETTING,then press the button 3 to confirm,there are some langes as follows:simple Chinese,Janpanese,Korea, English French,Germany,etc,at last press the button 3 to confirm and exit the setting.

Standby Setting:

The standby time is from 0-90 minutes,if setting with “00”,then standby automatically once no operation,if setting with “10”,then standby after 10 minutes,then press the button 3 to confirm and exit the setting

System Time Setting:

Inside the clock interface, keep pressing the button 1,then press the button 2 or the button 4 to select the SYSTEM TIME SETTING,then press the button 3 to confirm,and then press the button 2 or the button 34 to adjust the system time.And press the button 1 to select the setting item.

Alarm Clock Setting:

Inside the clock interface,keep pressing the button 1 and turn into the setting of the alarm clock.

1,If need to set the alarm clock,please set the alarm clock on,then can adjust the alarm time,the period,the alarm sound.

There is a default alarm sound setted in the unit,and also can select the alarm sound with the music inside the USB/TF card.

2,At the status of the clock,the alarm sound will be on 3 times,and later it will be on about 3 minutes each 5 minutes

3,At the status of the music playback,the alarm sound will only on 1 time.

4,At the status of the alarm sound on,press any key to stop the alarm clock

Setting Method:Keep pressing the button 1,then press the button 2 or the button 4 to select the alarm clock time,press the button 3 for the next step,press the button 2 or the button 4 again to set the time of the alarm clock.Press the button 1 to select the hour or the minute for the time setting.

Timing Radio Setting:

In order to set the timing radio,please set the timing radio setting on at first,also can adjust the radio time,the radio frequency.

Contrast Rate Adjusting:

The rate is from 0-20,then press the button 3 to confirm and exit this setting

Firmware Version:

Can't be adjusted

Exit Setting:

Exis the setting of the function

***Note:Can press the button 1 to exit any setting and go back to the clock interface

BLUETOOTH

1,Push the function switch(9) to the Bluetooth position, when the bluetooth devices are on for matching, the Bluetooth indicator light will twinkle fastly.

2,Open the bluetooth searching device of the mobile phone, when finding this device, and input the password "0000",the bluetooth indicator light will be on after matching successfully.

3,Now can play the music of the moble phone through this unit

4,Handfree function: can take the phone through this device when press the play button of this unit

5,When playing the music, press "PREVIOUS/VOLUME-" button, then go back to the previous song of the mobile phont bluetooth palyer, press " NEXT/ VOLUME+ " button,then skip to the next song.

6,At the status of this music playing,keep pressing " PREVIOUS/ VOLUME- " button,the can reduce the vulome accordingly, and keep pressing " NEXT/VOLUME+ " button,then can increase the volume accordingly.

7,When playing the music through the bluetooth,press the " PLAY/PAUSE " button,just pause the playing, press again and just continue to play;

NOTE: Within 5 minutes after the bluetooth function of this unit is on, if not find any matching devices, then the unit is power off automatically, if need to match again, keeping pressing the ?PLAY/PAUSE? button and the unit will be standby, at the same time, the bluetooth indicator light will twinkle slowly.